

Sample Shipment Instructions

According to MIDI Labs USDA/APHIS PPQ 526 Permit to Receive Unknown Biological Agents


Submit-a-sample checklist:

- 1. Complete Sample Submission Form, www.midilabs.com/submit-sample, print and enclose.
 - For mixed culture specify:
 - Isolate and identify **all** colony morphologies
 - Isolate and identify **predominant** colony morphology
 - Isolate and identify a **specific** colony (indicate)

- 2. Prepare samples for shipping per USDA:
 - **Plates**
 - Parafilm plate(s)
 - Seal in zip-top bag



- **Liquids**
 - Parafilm cap of tube(s)
 - Seal in zip-top bag **with sufficient absorbent material** to absorb entire contents, e.g., paper towels, cellulose wadding, and benchtop absorbent pads

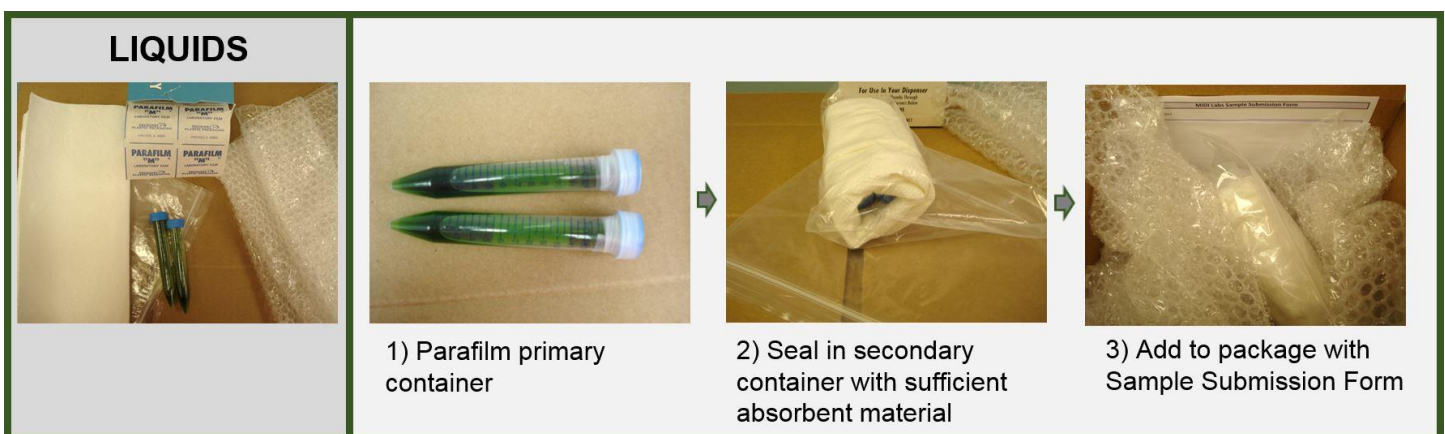

- **Powders**
 - Seal sample in container
 - Seal in second zip-top bag




- **3.** Place sample(s) and Sample Submission Form in a box and ship using Priority Overnight service. For Same Day turnaround time, please specify 8am delivery (e.g., FedEx First Overnight or UPS Early A.M).

Send packages to:

MIDI Labs, Inc.
125 Sandy Drive
Newark, DE 19713

- “Saturday Delivery” accepted from 9am – 1pm, must specify Saturday Delivery on shipping document. Priority Overnight sent on a Friday will not be delivered until Monday.
- Shipping suggestion: Although it’s not necessary to ship your samples at refrigeration temperature, during warmer weather placing an ice pack in the box will prevent “media meltdown”.

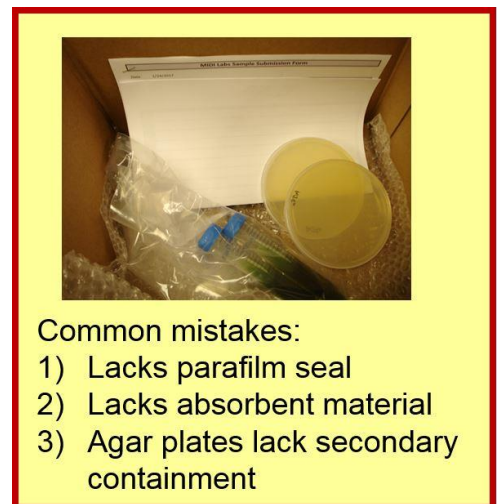

Have Questions? We can help! Just contact MIDI Labs at 302-737-4297 or info@midilabs.com

Thank you! We appreciate your business!

Please note: MIDI Labs does not accept direct clinical specimens or Class III pathogens.